


PYLON 6 INSTALLATION INTRODUCTION


The Basler Pylon Camera Software Suite consists of certified drivers and software to get you started with your camera.

Supports all current Windows versions up to 11. For Linux and Mac please see Basler website.

INSTALLATION

- On the memory stick provided (along with other files) you will find the Pylon 6 installer file (Basler_Pylon_x.x.x.xxxx.exe).
- Double click on the installer file and once you have agreed to the terms and conditions, you will get to the profiles screen below.

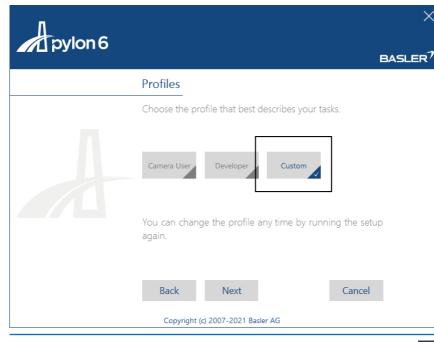

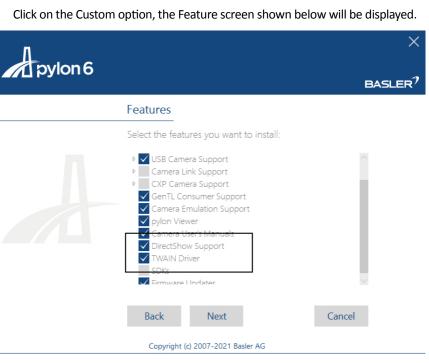

- Although any of the main features can be selected, the two that must be are DirectShow (for use with ViPlus or D2) and TWAIN (for image capture in graphics packages).
- With the required features selected, press Next and the Pylon 6 software will begin to install.



PYLON 6 INSTALLATION CONNECTING A CAMERA

Double click on the Pylon software icon to start the software. The cameras that are connected are shown on the left hand side of the screen (see opposite and below).

Device	es	\checkmark \Rightarrow \times
Ba	asler CXP GenTL Producer	
✓ Ca	amera Emulation	
	Basler Emulation (0815-0000)	
Ca	amera Link	
Gio	gE	
✓ US	SB	
	Basler daA2500-14uc (23938155)	· · · · · · · · · · · · · · · · · · ·
	Basler daA3840-45uc (40122269)	
	now Cameras Only	🗹 Auto-Scan 🛛 🧭

Enter OF Gard, Freidere Cannes Industrie (195-300) Cannes Industrie (195-300) Cannes Industrie (195-300) Cannes Industrie (195-300) Materia (195-300) Materia (195-300) Materia (195-300)			
] Pero Cameras Dely adueto = All Aldect any spar-camera in the devices pare &	l halt fan Ø v ≠ x	BASLER	
	Paties Documentation		<i>∀ 8</i>
	and bits of		

a x

- Select the required camera i.e. the Basler daA2500-14uc.
- In the top left corner, there is a red switch. Click on this and it will go green and the settings table will populate.
- The selected camera will now be ready to use.
- ▶ To view live video press the Continuous Shoot icon □ on the toolbar.
- H H

For further instructions on how to use the Pylon software, select Help - Get Help on the toolbar or press F1 to access the Basler Pylon help centre.

	44446	3,⊠⊕⊞⊵∢						
ikes			~ \$ X	Basler daA2500-14.c (23938155) 🔯				
Basler CXP GenTL Producer Camera Emulation								
Baster Emulation (0815-0000)								
Camera Link								
Gigil USB								
Basler daA2500-14ac (2393815) Basler daA3840-45ac (40122260)	1							
Show Cameras Only		12.000	scan 😰					
		PC with						
tures - All			~ # X					
onmon Taska		v Search for parameters	ρ					
tegory	Feature	Value						
Baster da/2500-14uc (23938153)								
Analog Control	>							
Image Format Control	2							
Acquisition Centrel	2							
Image Quality Control Digital IO Control								
Auto Function Control	2							
User Set Control	1							
Test Control	1							
Transport Laver Control								
Device Control								~
Stream Parameters	1			Feature Documentation				~
Host Transport Layer								
Event Grabber Parameters								
image Format Conversion								



PYLON 6 INSTALLATION USER CAMERA CONTROLS

- When a camera is open, the image settings can be changed using the controls in the Features box on the bottom left of the screen.
- Default camera settings are pre-set at the factory and saved onto the camera. A copy of these settings is also on the USB stick provided with the system should they need to be reloaded.
- To load a settings file select Camera Load Features from the toolbar then navigate to the settings file supplied with the camera (.pfs format file).
 - Settings files can only be loaded when the camera acquisition is stopped.
- Modified camera settings can be saved using the Camera Save Feature option on the toolbar, but note that these will need to be reloaded each time the software starts.
- To load the setting by default when the camera starts, use the User Set Control Feature. Ensure the correct settings are applied to the camera, then stop the video, select User Set Control and change User Set Selector to be User Set X (whichever is desired). Press Execute to save current settings to User Set X, then set User Set Default to User Set X.

C C C C C C C C C C C C C C C C C C C		6	÷) (=)	↔ (100) 5	7	\square	1mm	Ś
Devices	0		~~~			лA		<u>/-</u>	~ %
 Camera Emulation 		_							
Basler Emulation (08	15-0	nn	00)						
GigE	151	00	00)						
✓ USB									
Basler daA2500-14	uc (24	17709	2)					
Show Cameras Only						2	Auto-	Scan	
							_		
Features – All									~ \$
Common Tasks				``	 St 	earch for p	paramet	ters	2
Category	-	`	Feature			Value			
 Basler daA2500-14uc (24177092) 			User Set S	elector		User Set	2		
Analog Control	>		User Set L	oad			Exec	ute	
Image Format Control	>		User Set S	iave			Exec	ute	
			User Set D)efault		User Set			
Acquisition Control	>		0.000	, crudit		USEI JEL			
Acquisition Control Image Quality Control	> >	l		, croon		USET SEL	-		
		ľ	osci sere			USET SEL	-		
Image Quality Control	>	ľ				USET JEL	-		
Image Quality Control Digital IO Control	>						_		
Image Quality Control Digital IO Control Auto Function Control	>						-		
Image Quality Control Digital IO Control Auto Function Control User Set Control Test Control	>								
Image Quality Control Digital IO Control Auto Function Control User Set Control Test Control Transport Layer Control	>								
Image Quality Control Digital IO Control Auto Function Control User Set Control Test Control Transport Layer Control Device Control	> > > > >								
Image Quality Control Digital IO Control Auto Function Control User Set Control Test Control Transport Layer Control	> > > > >	ļ							