



ViCapture Software v2.1 Quick Setup


Min. Recommended System Specs: Windows 10 (32/64-bit), Intel® Core i5 - 2.5 GHz,
4GB RAM / 200 GB HD

1. **Uninstall any previous version of IDS uEye, Pylon and ViCapture software from your PC.**
2. **Unplug Lynx Lynx EVO Smart Cam5A HD from the PC**
3. **Install IDS Peak – “ids_peak_2.1.0.0.exe”**
4. **Select Custom Install.**

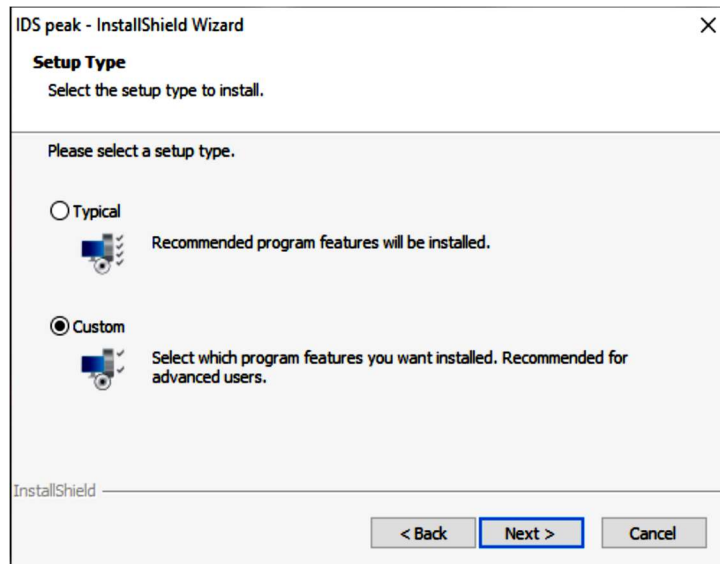

5. **At “Select Features” window, select the option “Support for the uEye cameras”**

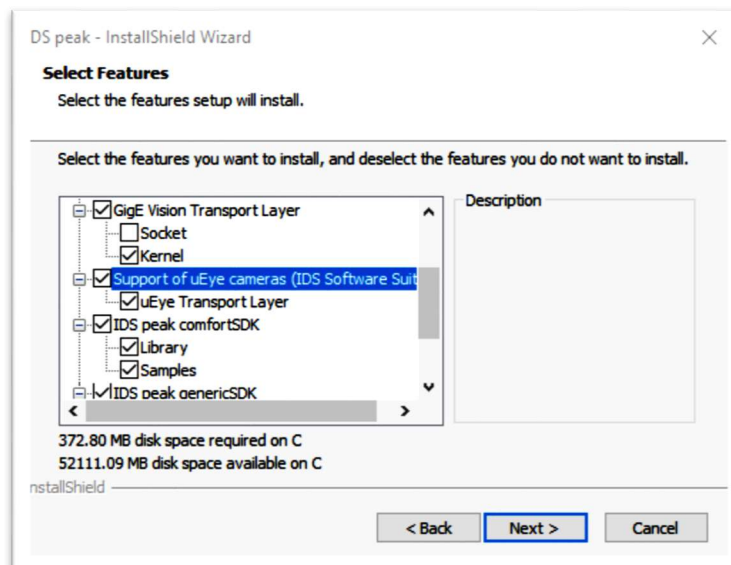

6. Complete the installation process.
7. Restart the PC
8. **Install IDS Software Suite** v4.951 or later – “**uEye_49510.exe**”
9. Restart the PC
10. **Install ViCapture v2.1 Software** – “**ViCaptureSetup.msi**”
(Do not connect the Lynx EVO HD to the computer)
11. Follow ViCapture installation wizard until the **Installation Complete** screen is displayed
12. Restart the PC
13. **Connect** the Lynx EVO Smart Cam 5A HD to the PC.
14. Launch ViCapture Software
15. Enter **Supervisor** mode, click the  button and enter the password
(Default password: **Vision**) and click **OK**.
16. Load Camera and Settings
 - Click on the ‘**Settings Tab**’
 - **Camera** > From drop down select the correct camera “daA2500-14uc xxxxxxx”
 - **Settings** > Load the correct settings file and save
(Click on Manage> Import> open the “ settings File” folder and select the settings file > Click on Save and Close > Open drop down in settings and select the saved settings file)
17. Lynx EVO Smart Cam 5A HD is now ready for use